



FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final		Id: 1/1

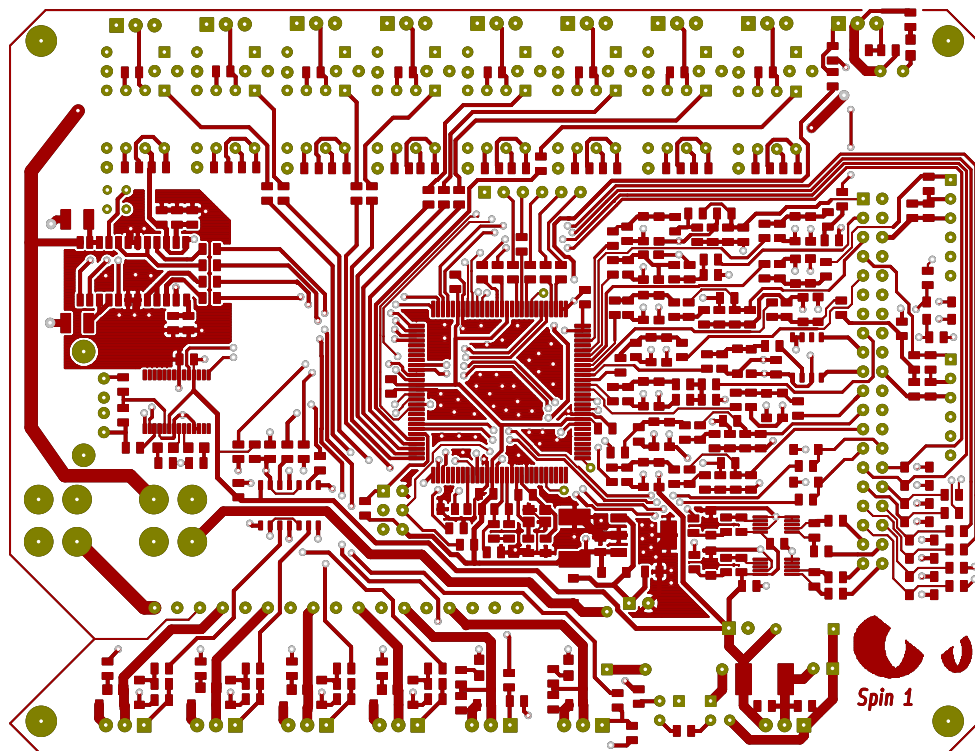


FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final		Id: 1/1




FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final		Id: 1/1

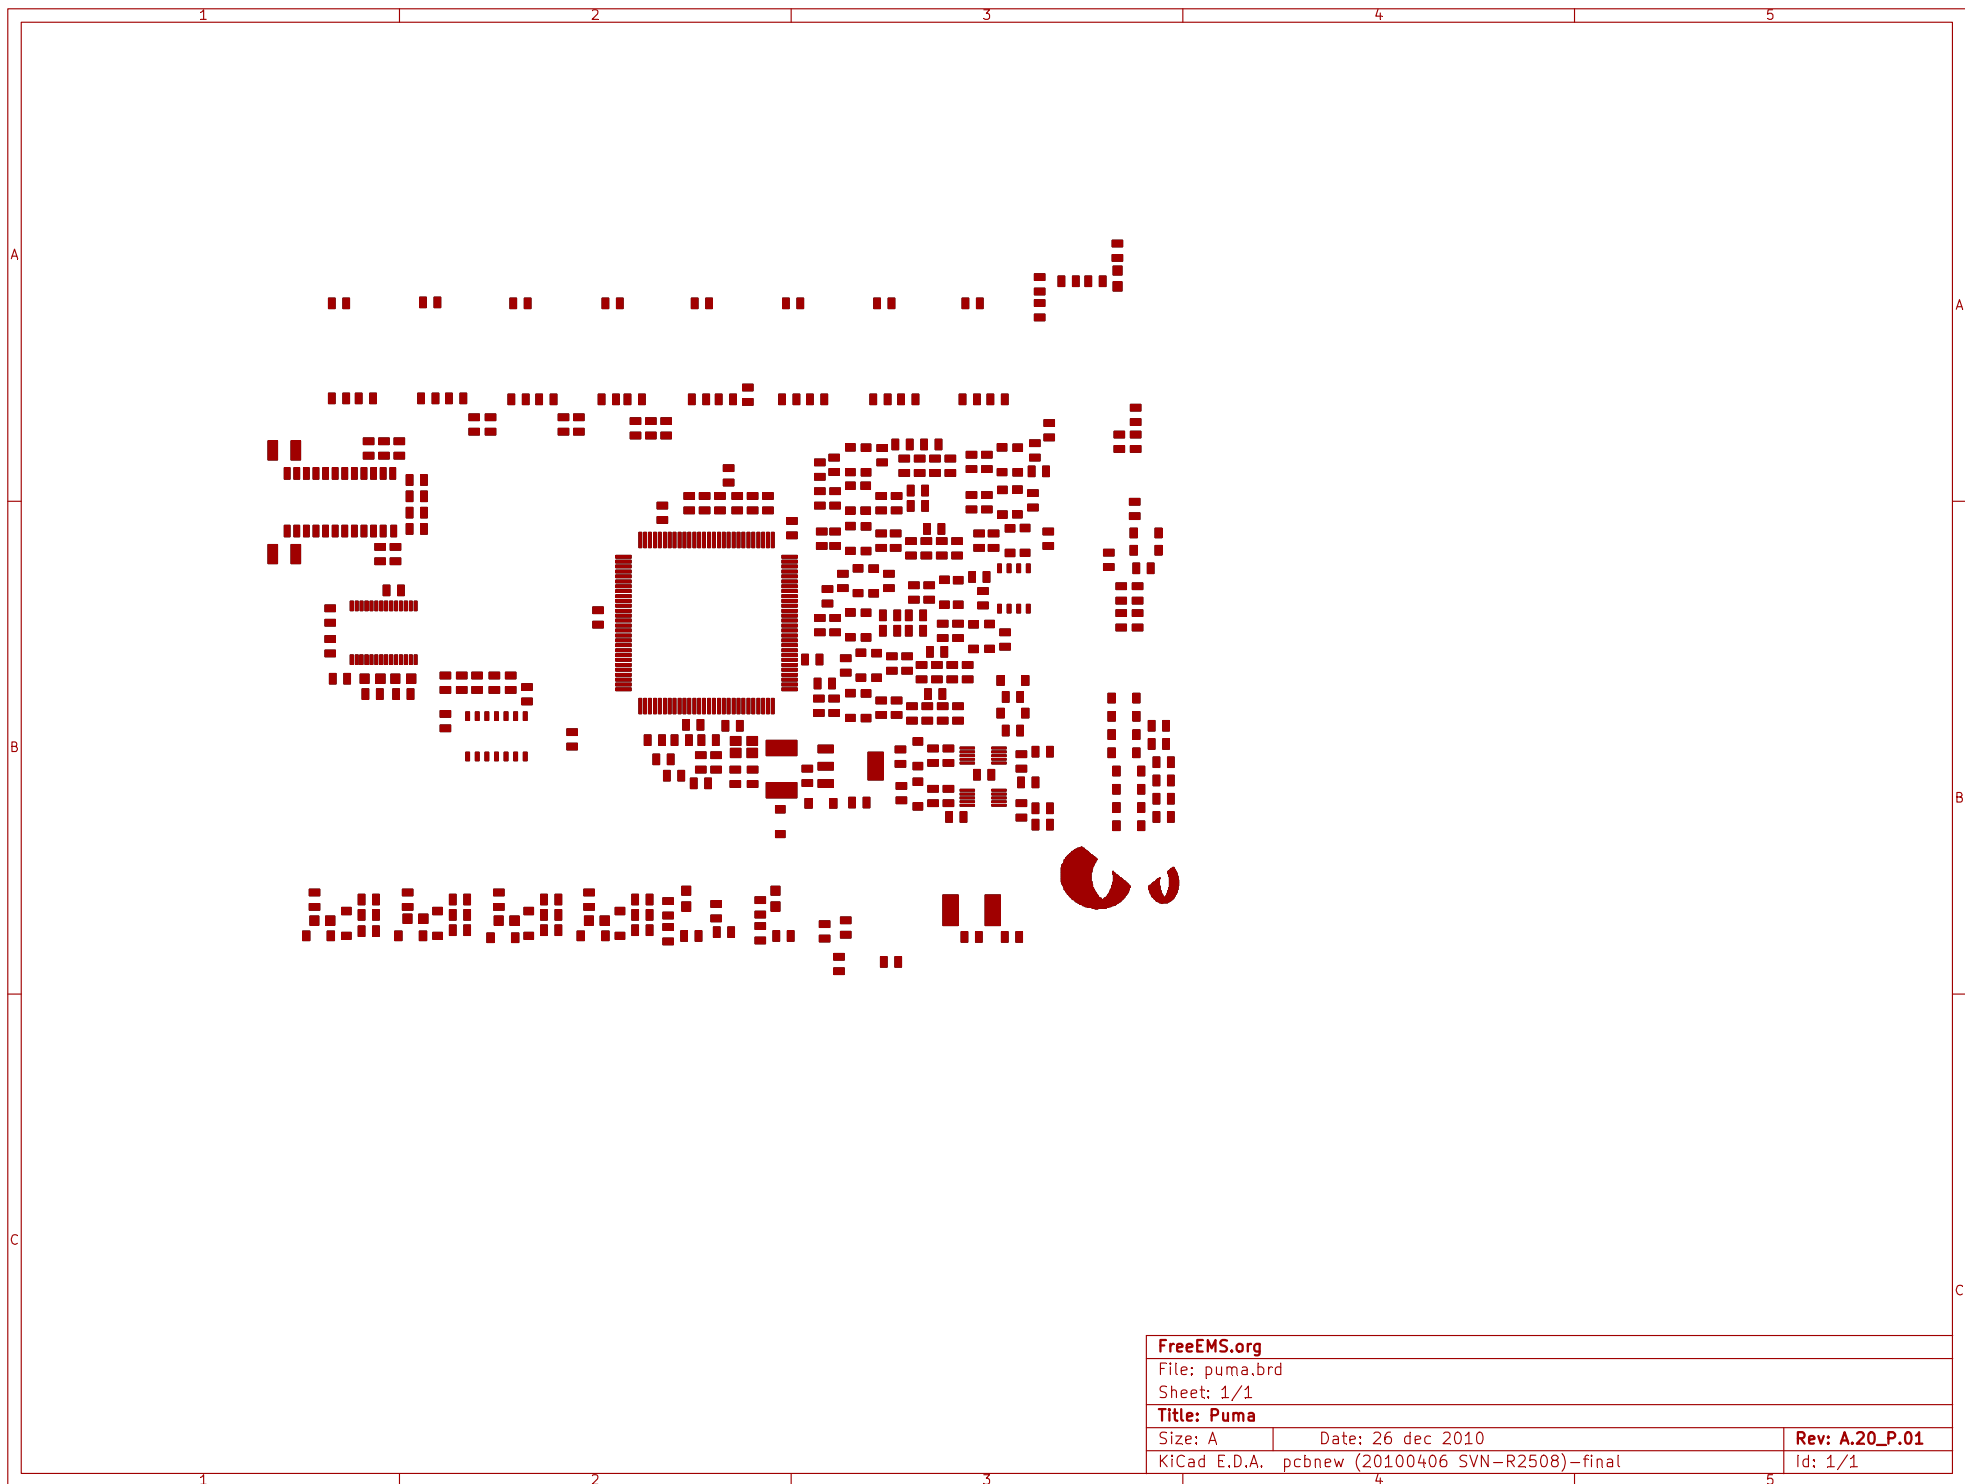

FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final		Id: 1/1

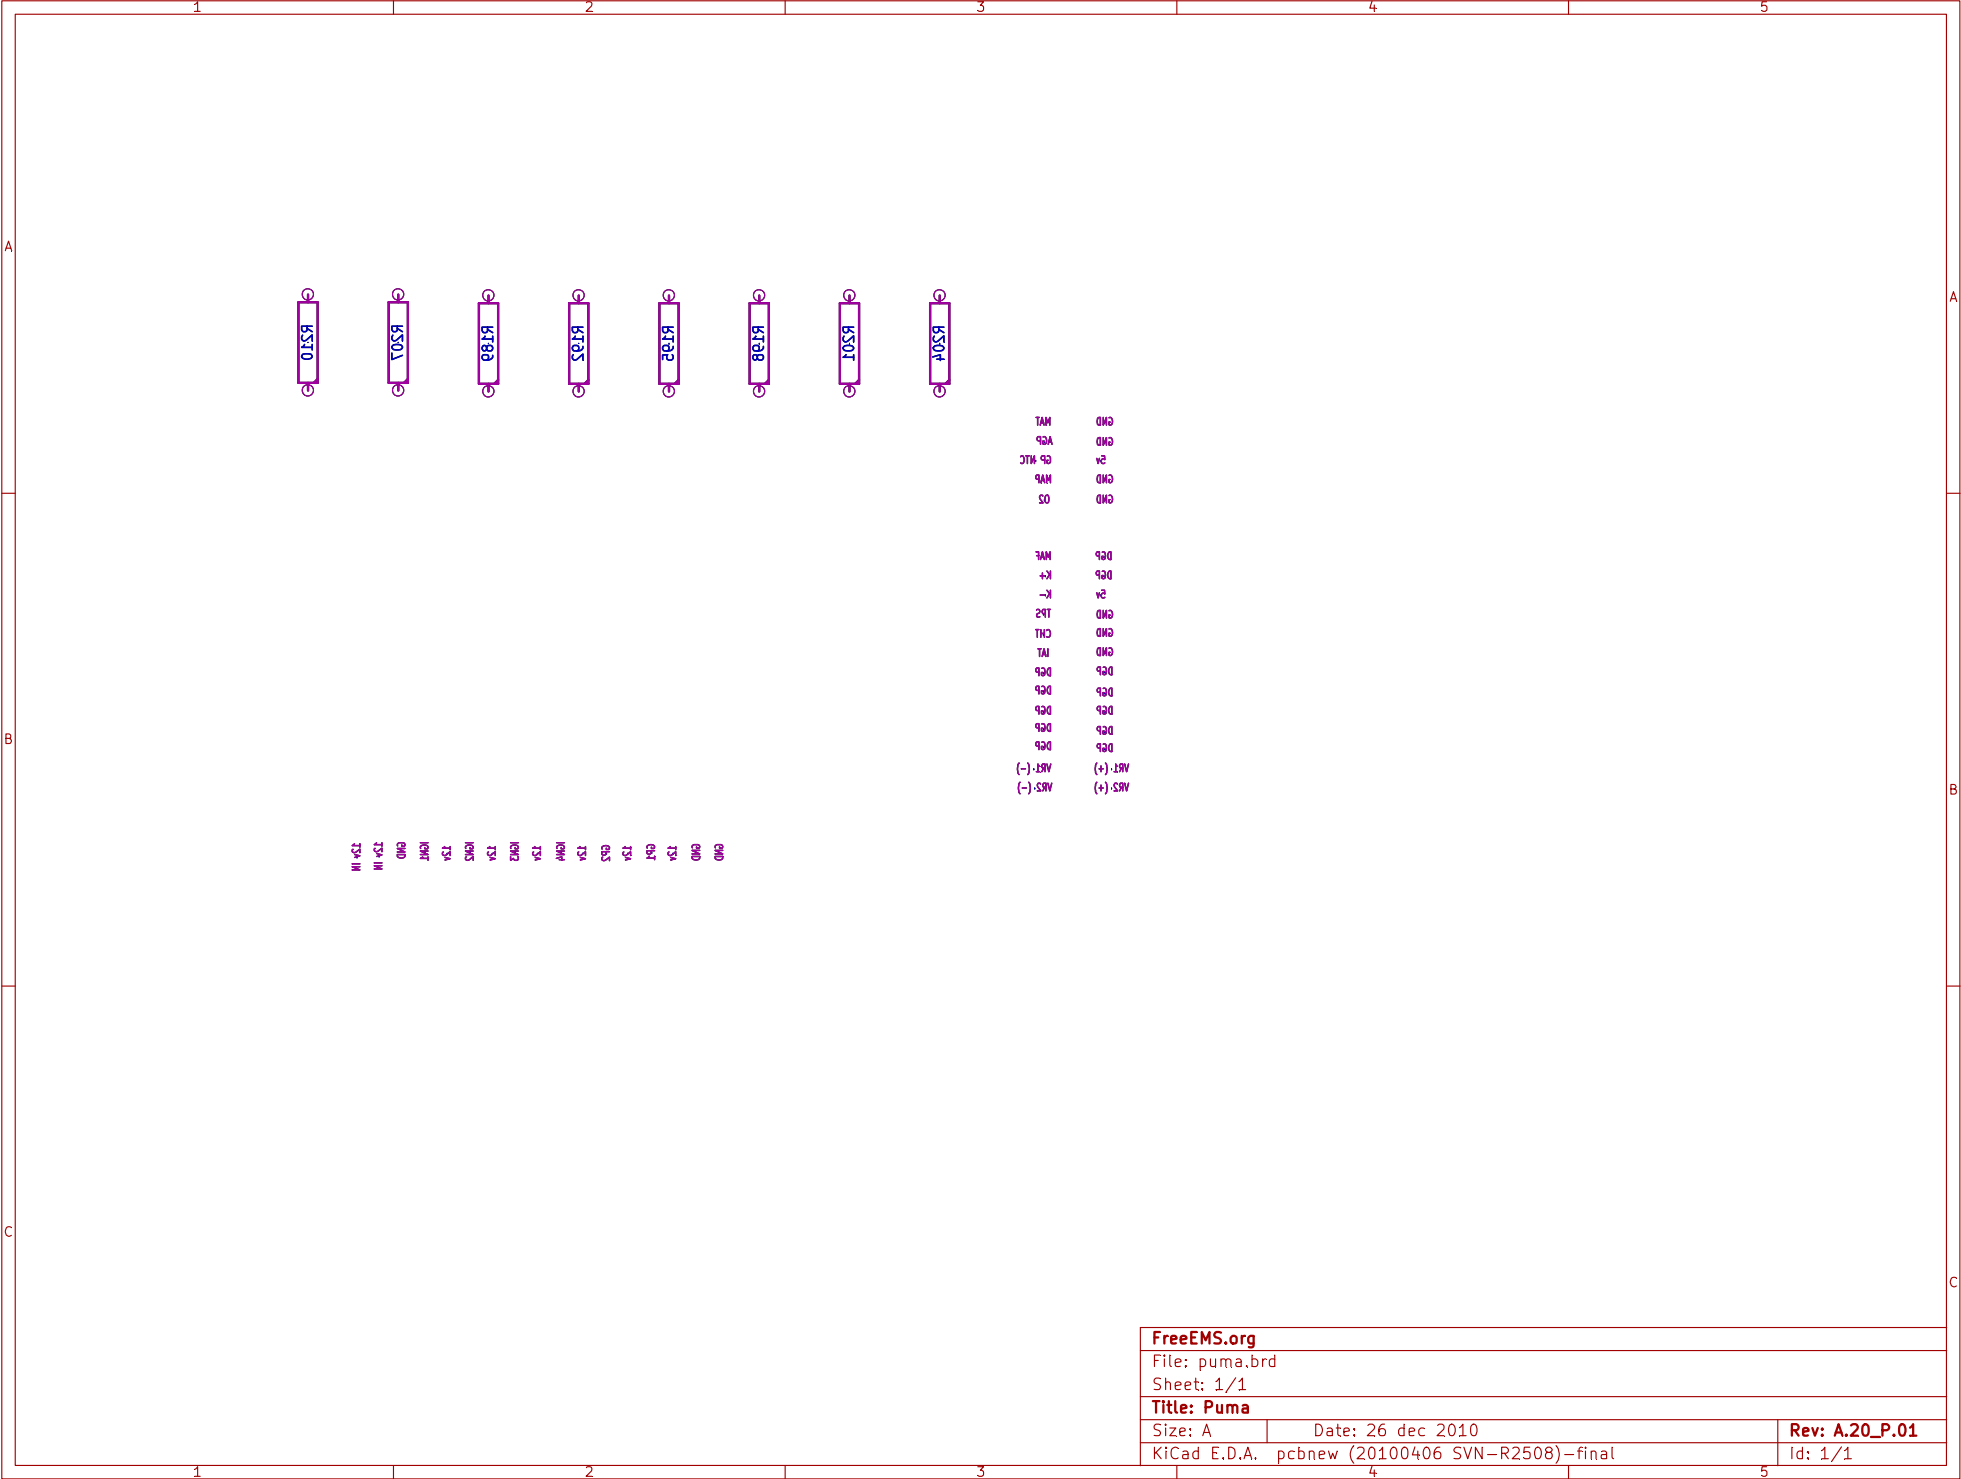

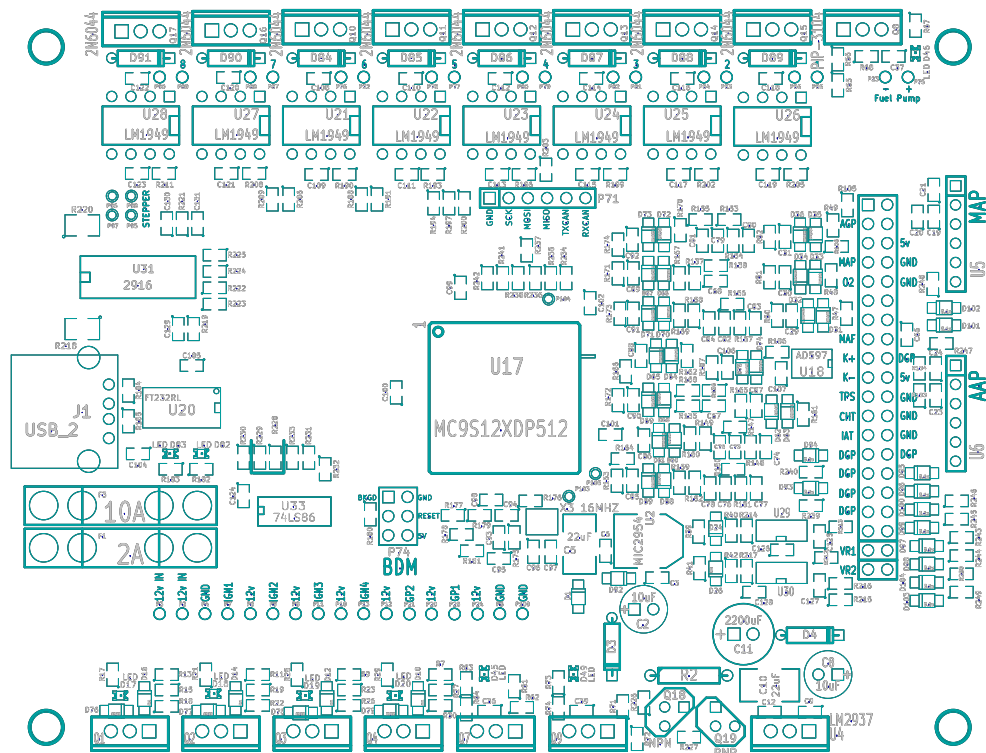

FreeEMS.org

File: puma.brd

Sheet: 1/1


Title: Puma

Size: A Date: 26 dec 2010


KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final


Rev: A.20_P.01

Id: 1/1

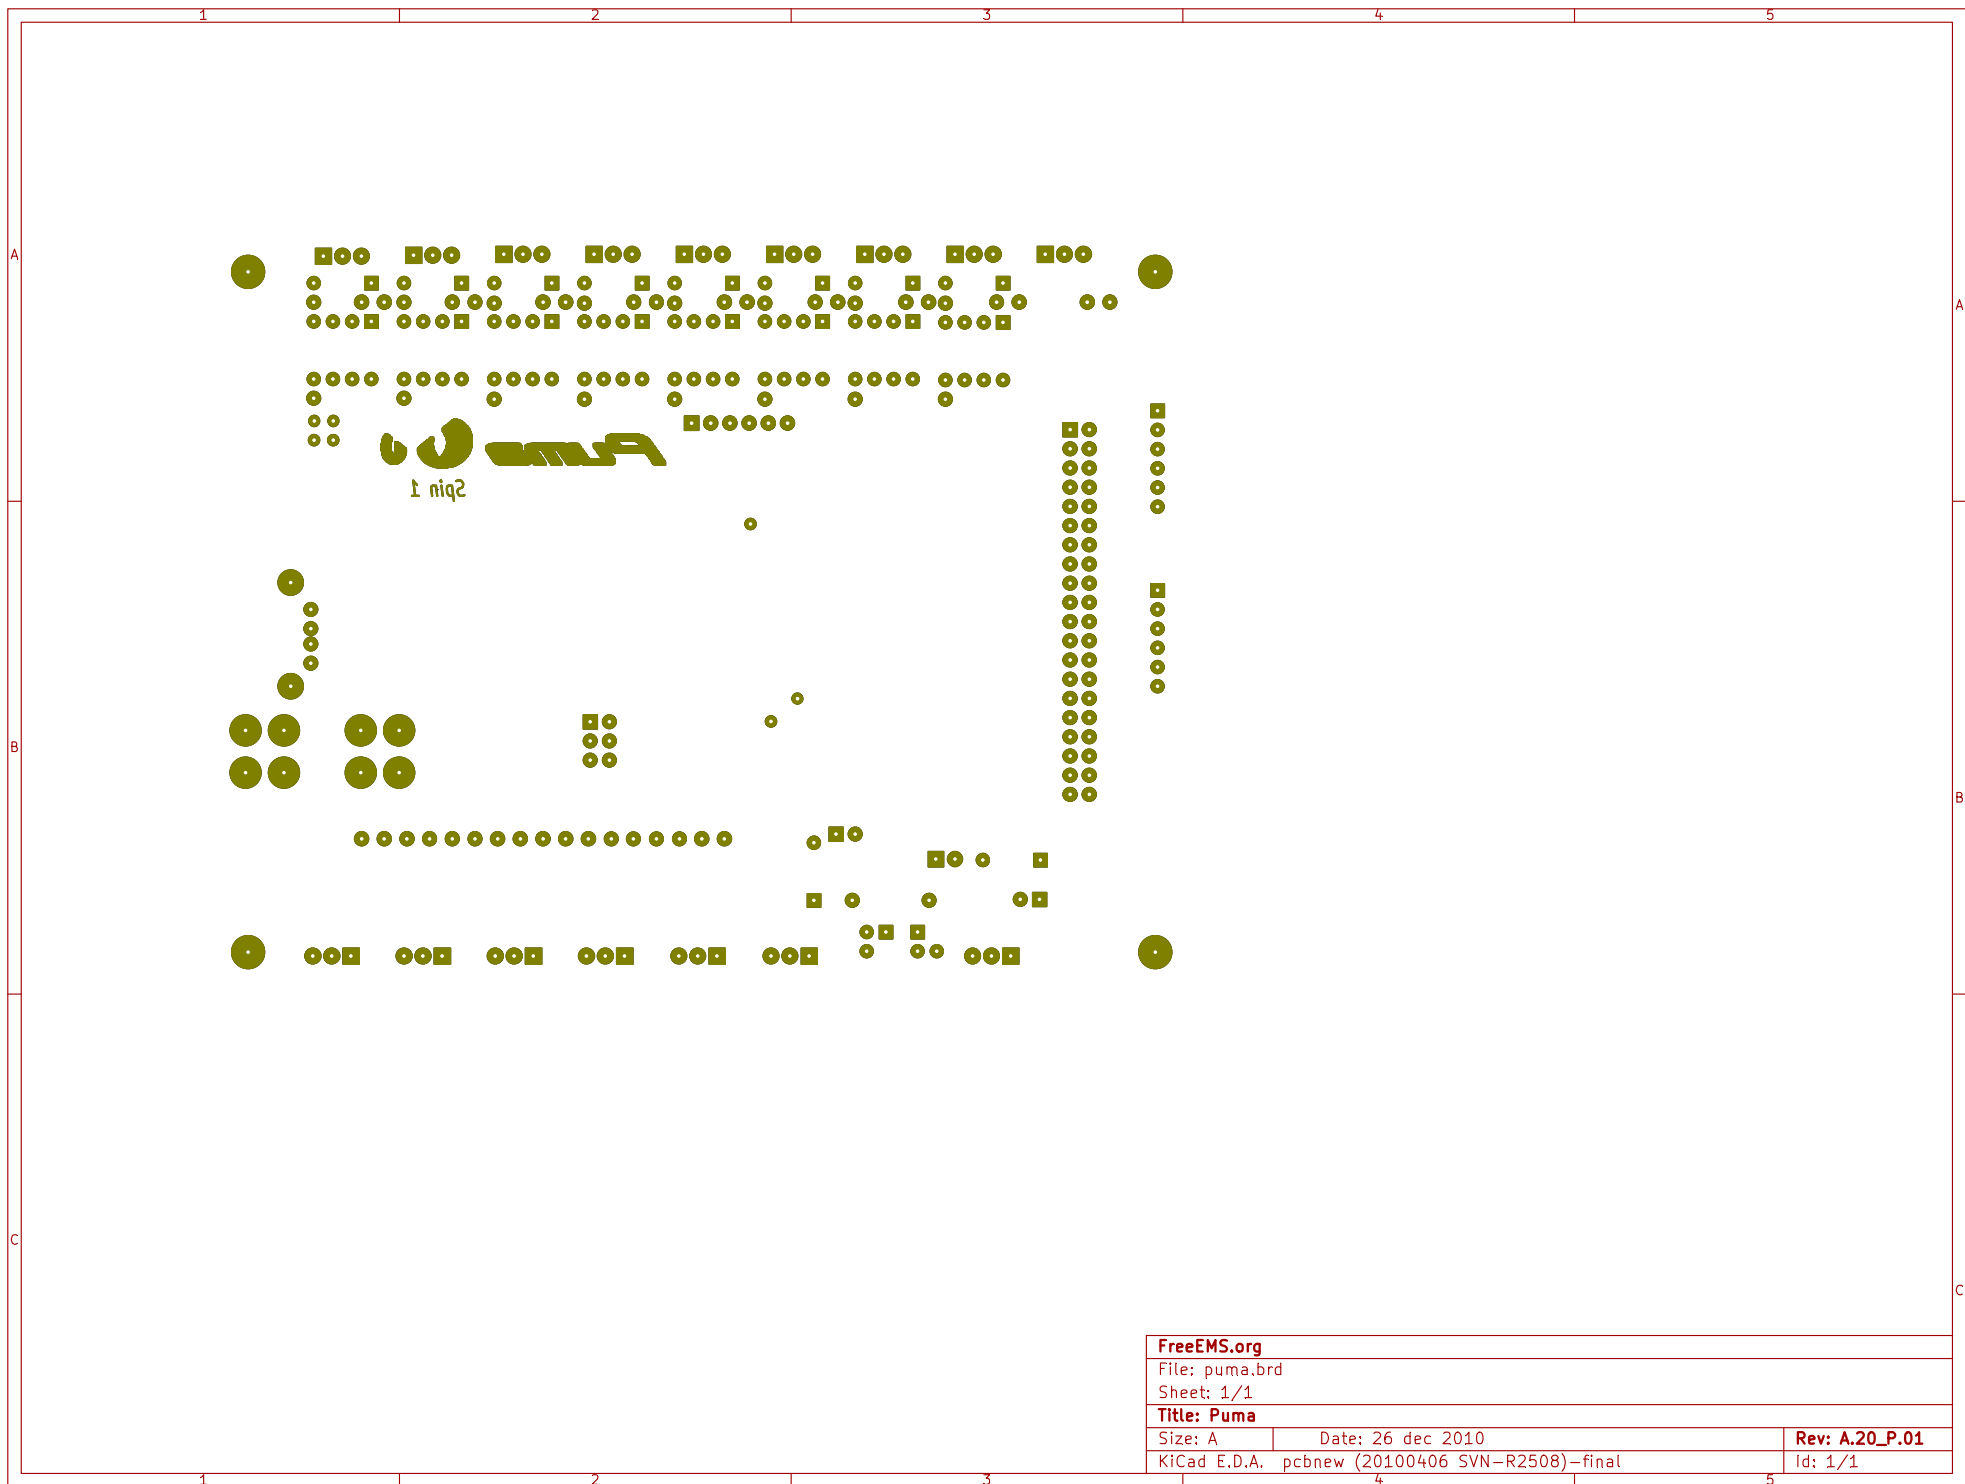

FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	Id: 1/1

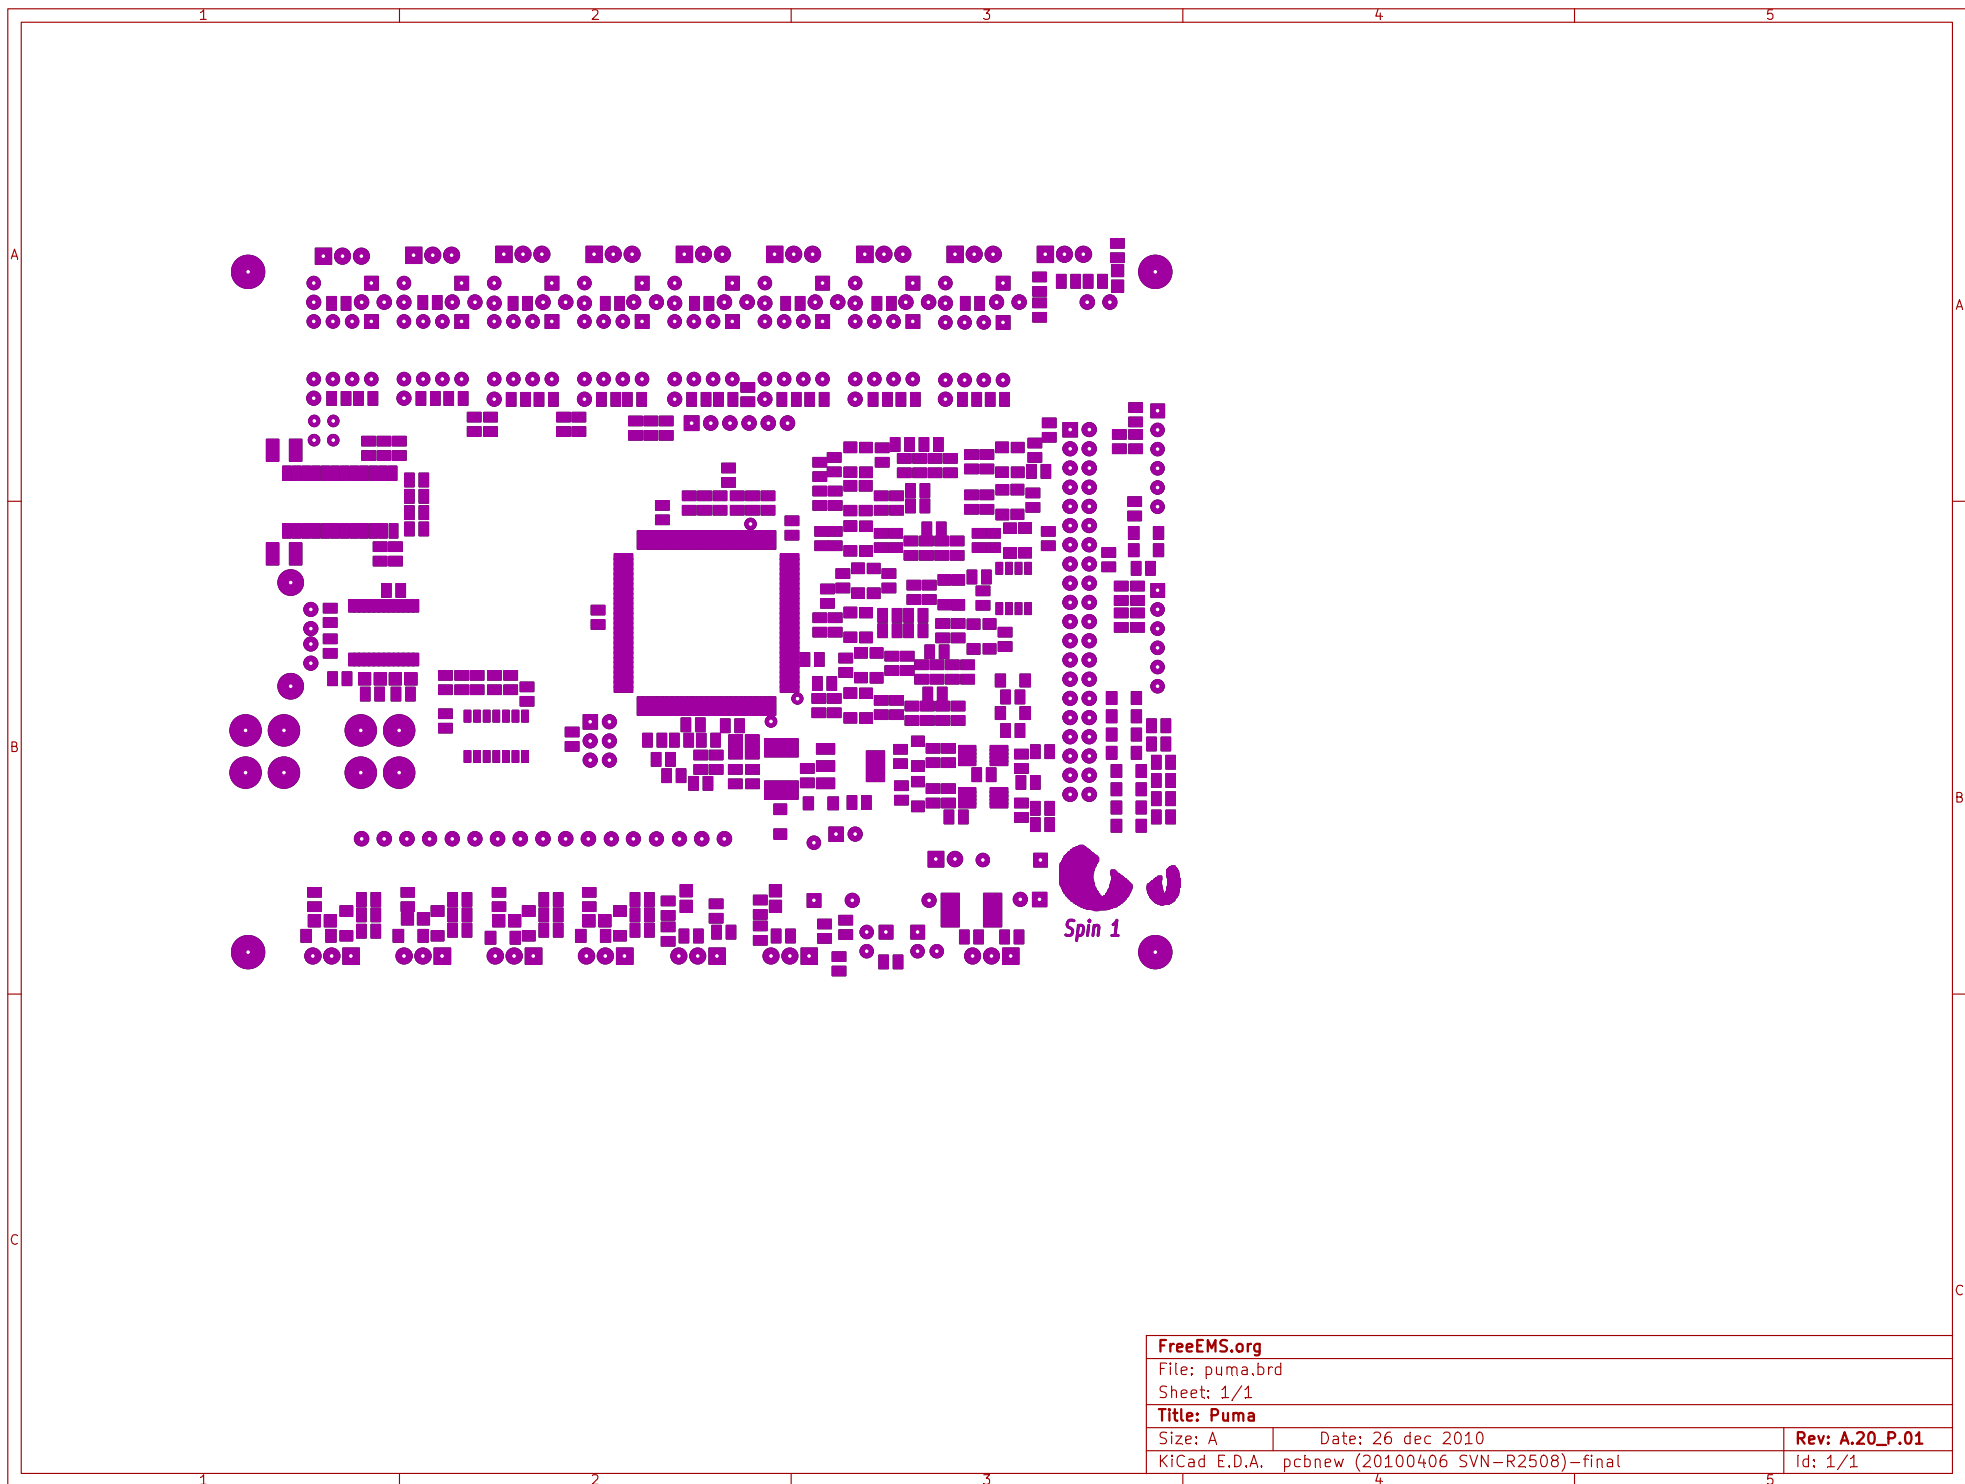

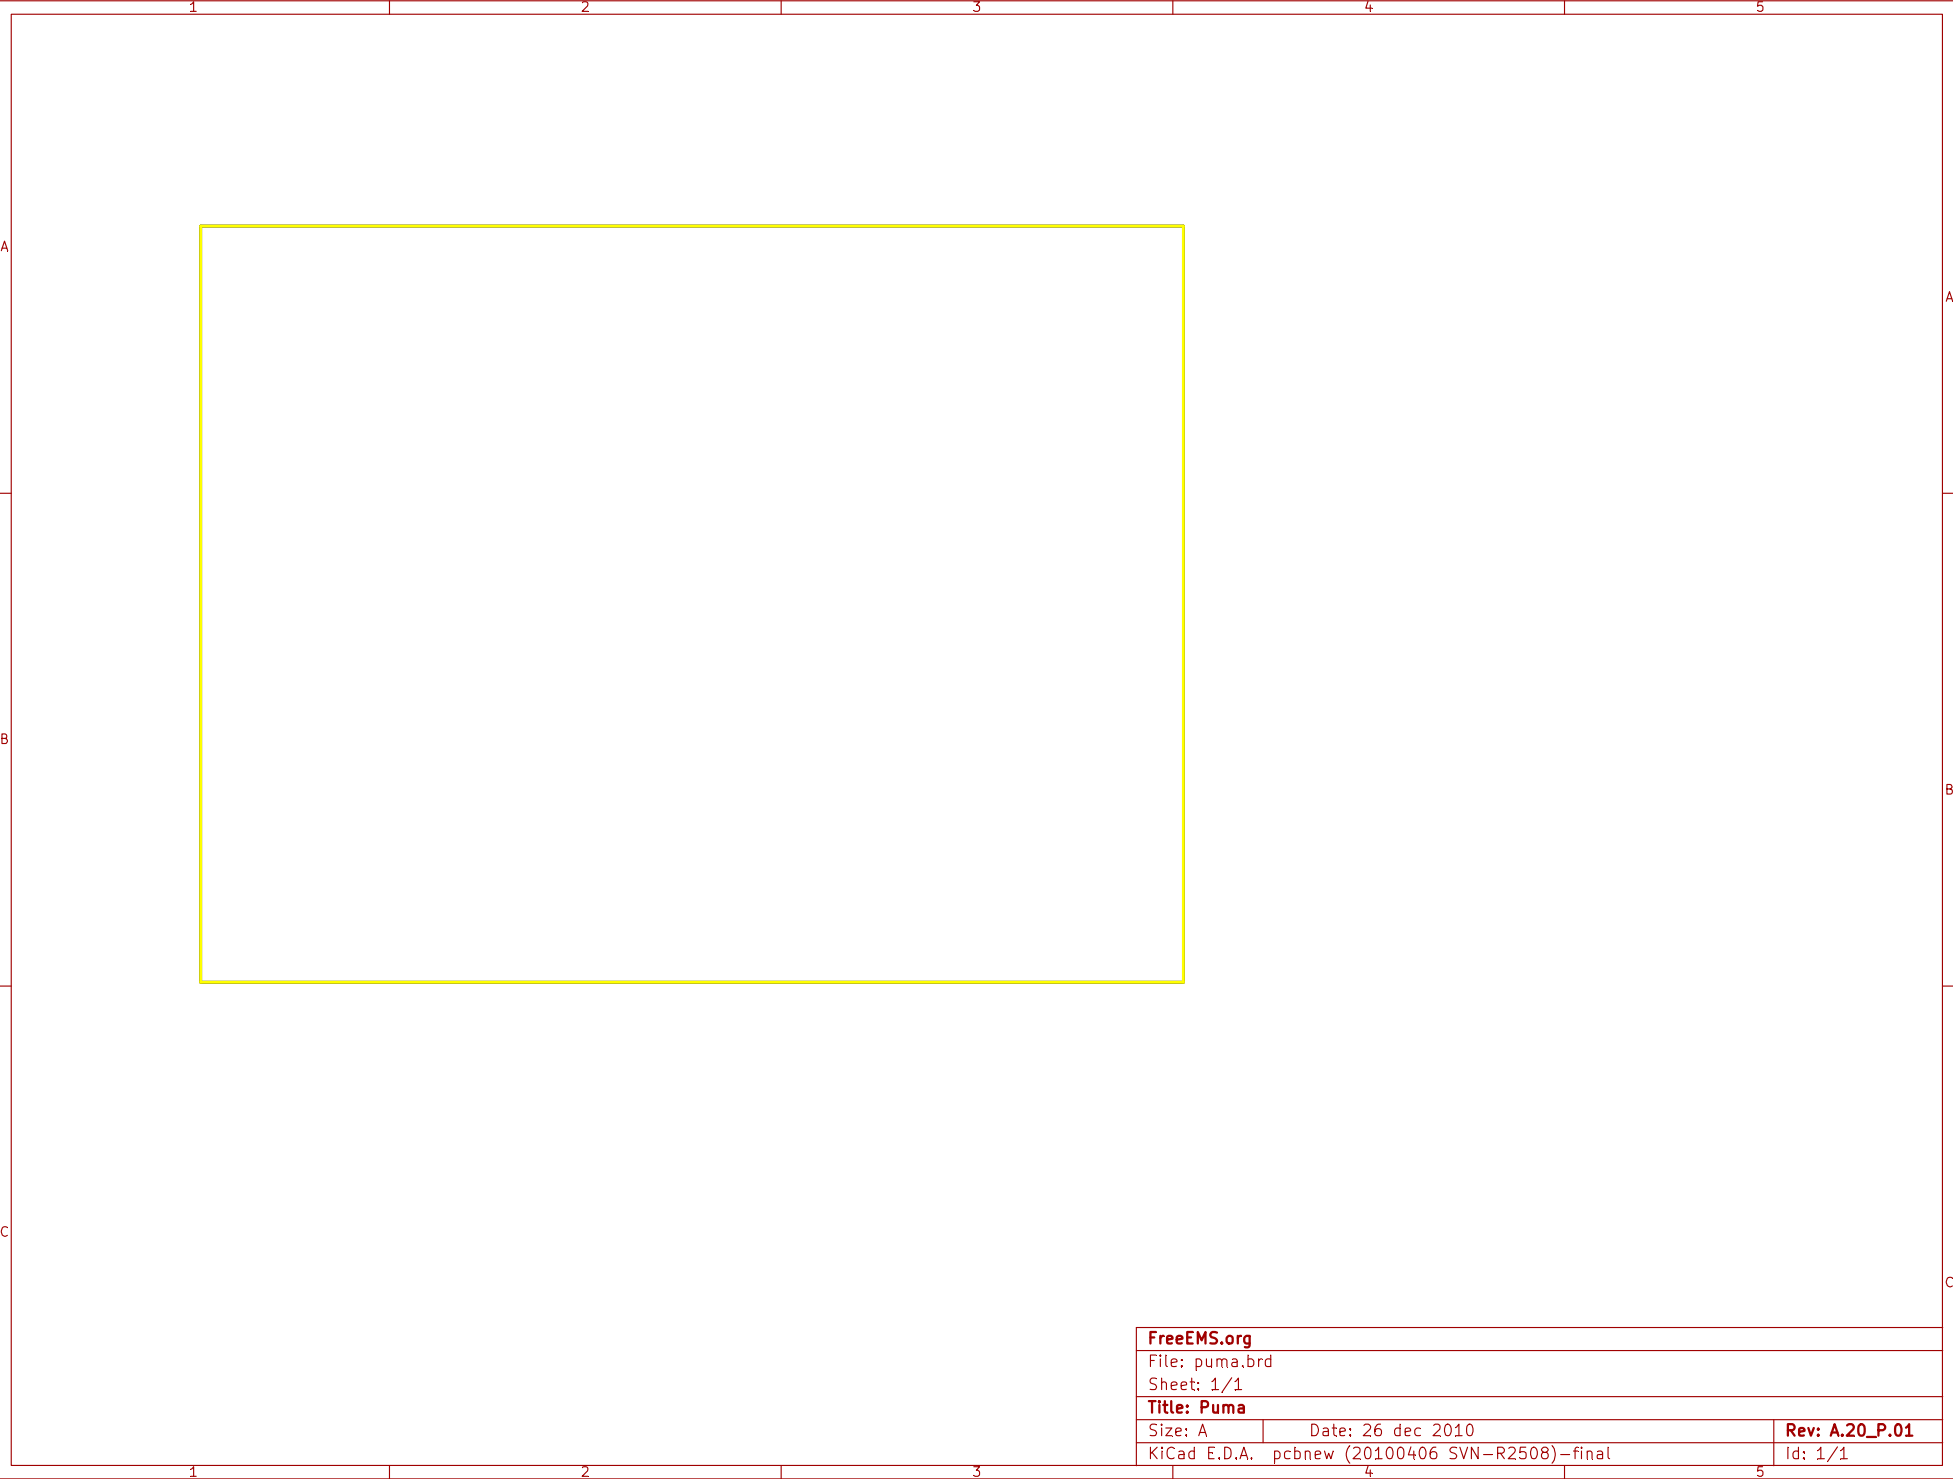

FreeEMS.org		
File: puma.brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 26 dec 2010	Rev: A.20_P.01
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	Id: 1/1